

UV lamphead connections:

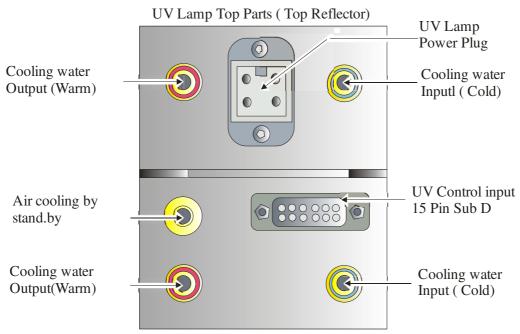

UV Bottom Parts Side reflectors


UV lamphead front:

UV Lamp Top Parts (Reflector Top

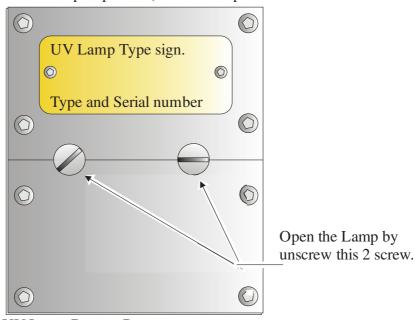


UV Lamp Bottom Parts


UV lamp change:

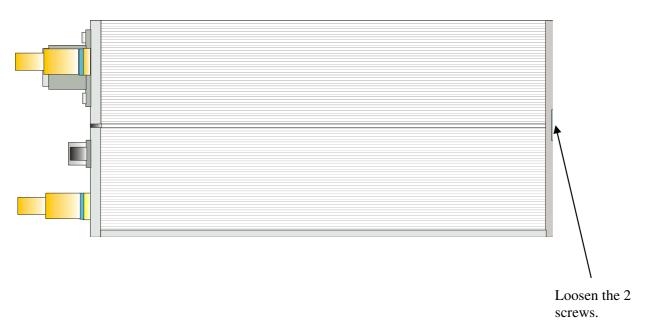


Lift the top part 30-45 degree from the bottom part and pull the top part in the direction of the arrow to release the hinge.

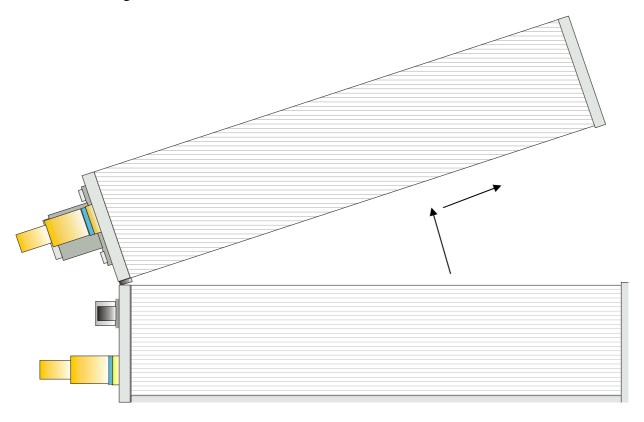

UV lamp change:

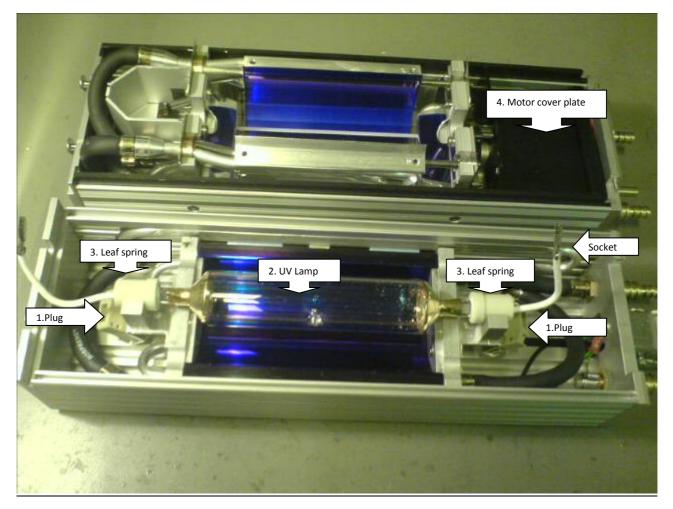

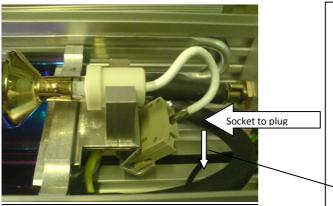

ATTENTION!

Do not touch the UV lamp glass with the bare hands, touch only the cheramic sockets.

- 1) Before opening the lamphead disconnect the electrical connections.
- 2) Open the lamphead as shown on page 8.
- 3) Pull out the socket from plug # 1 in both
- 4) Pull out the UV lamp #2 from the leaf springs #3.
- 5) Mount the new UV lamp in the leafspring #3.
- 6) Connect the socket to plug #1.
- 7) Make sure that the socket is fully inserted in the plug, to prevent shortcut to the motor cover plate #4.
- 8) Close the UV lamphead again.